LG 2G Unlock Clip

Unlocking Guide

Operations Manual V1.12
4th June 2007

To power your clip you must insert 2 x AAA batteries.
Your clip has 2 buttons and 4 LED's.

The left button = Select
The right button = Enter
(With the batteries at the bottom and PS2 port at the top)

To change between modes simply press the **Select** button.

Operating Instructions.

1. Connect your phone to the relevant cable (Phone off, No SIM).
2. Power your clip by inserting 2 x AAA batteries.
3. Press the **Select** button to get the correct mode for your phone.
4. Press the **Enter** button and **hold** down the power button on the phone.
5. All 4 LED's will come on together to indicate a successful unlock.

If you get LED's 1 & 2 on solid and 3 & 4 flashing this indicates an error.

Before attempting to unlock a phone please make sure you have selected the correct mode by checking from the list below!

[Mode 1] Off, Off, Off, On

LG-1300i	LG-C2200	LG-F7250	LG-GW5220	LG-M6100
LG-A7110	LG-C3100	LG-F9100	LG-GW5300	LG-M6100
LG-A7150	LG-C3300	LG-G1500	LG-GW5310	LG-ME500
LG-B1200	LG-C3310	LG-G1600	LG-GW5400	LG-ME591
LG-B1300	LG-C3320	LG-G4010	LG-KG210	LG-MG100
LG-B2000	LG-C3380	LG-G4050	LG-KG220	LG-MG105
LG-B2050	LG-C3400	LG-G510	LG-KG225	LG-MG105
LG-B2070	LG-CE500	LG-G5500	LG-KG320	LG-MG155
LG-B2100	LG-CG225	LG-G7000	LG-KG810	LG-MG191
LG-B2150	LG-CG300	LG-G7020	LG-L1100	LG-MG200
LG-B2250	LG-F1200	LG-G7030	LG-L1200	LG-Mg530
LG-C1100	LG-F2100	LG-G7050	LG-L1400	LG-Mg810
LG-C1150	LG-F2200	LG-G7070	LG-L3100	LG-P7200
LG-C1200	LG-F2250	LG-G7100	LG-L341	LG-S5000
LG-C1300i	LG-F2300	LG-G7120	LG-L342i	LG-S5200
LG-C1400	LG-F2400	LG-G7120	LG-L5100	LG-W3000
LG-C1500	LG-F3000	LG-G7200	LG-M4410	
LG-C2100	LG-F7200	LG-GW3100	LG-M6100	

[Mode 2] Off, Off, On, On

LG-C1300	LG-G4011	LG-G7030
LG-C2000	LG-G4020	LG-L1100
LG-F7250	LG-G4050	LG-L1400
LG-F9100	LG-G5500	LG-L5100
LG-G4010	LG-G7050	LG-T5100
LG-G7020	LG-G7000	

[Mode 3] Off, On, On, On

LG-Ce500
LG-7110
LG-VX5200
LG-C2000
LG-C1500
LG-AX5000

[Mode 4] On, On, On, On

LG-KG800 Chocolate

[Mode 5] On, Off, Off, On

LG-CG300
LG-F1200
LG-KG810
LG-MG810
LG-MG530

[Mode 6] Off, On, On, Off

LG-KE970 Shine
LG-KE850 Prada
LG-KE820
LG-KE260
LG-KE600
LG-KE608
LG-K608N
LG-KE770
LG-KE800

[Mode 7] Off, On, Off, On

LG-KG200
LG-KG110
LG-KG120
LG-KG210
LG-KG220
LG-KG225
LG-KG300

If the phone is still locked then power on phone and enter 2945#*# select factory reset.

Updating Instructions.

1. Connect your clip to a pc using a serial to PS2 cable.
2. Run the software and tick the box that says “Write ext FLASH data”

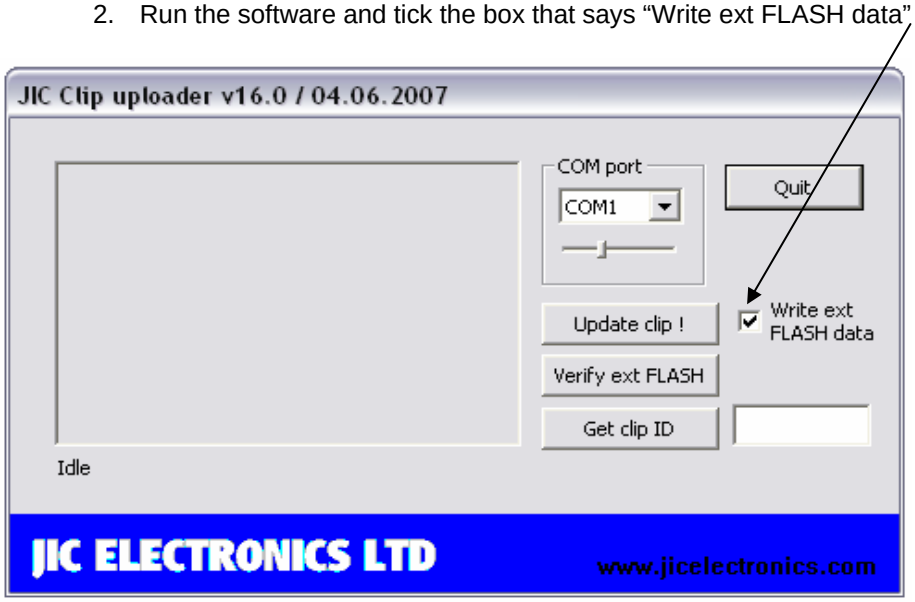

3. Click “Update clip!” and select the **.UPD** file that came with the update and press “Open”
4. Then select the **.BIN** file that came with the update and press “Open”
5. When you see “POWER ON the clip! ||||” insert your 2 x AAA batteries to begin updating.
6. When the updater says “OK” job done.

Activation Instructions.

If you have an old LG clip and want to activate it to work with the newer models you will need to get an activation code from your supplier.

To do this…

1. Connect your clip to a pc using a serial to PS2 cable.
2. Run the software, click “Get clip ID”, and inset your 2 x AAA batteries.
3. The software will display your Clip ID in the box

Email this ID to your supplier and they will email you your activation code.

Simply paste your activation code in the clip ID box on your software and click “Get clip ID” again.

When the software says **“CLIP SUCCESFULLY AUTORIZED !”** job done.